MAH22PRAWW - Parts Lookup

01 - TOP AND CABINET PARTS - IMAGE *2*

01 - TOP AND CABINET PARTS 2

02 - DOOR AND LATCH PARTS - IMAGE *4*

02 - DOOR AND LATCH PARTS 5

03 - CONTROL PANEL PARTS - IMAGE *6*

03 - CONTROL PANEL PARTS 7

04 - DISPENSER PARTS - IMAGE *8*

04 - DISPENSER PARTS 9

05 - PUMP AND MOTOR PARTS - IMAGE *10*

05 - PUMP AND MOTOR PARTS 11

06 - TUB AND BASKET PARTS, OPTIONAL PARTS (NOT INCLUDED) - IMAGE *12*

06 - TUB AND BASKET PARTS, OPTIONAL PARTS (NOT INCLUDED) 13

MAH22PRAWW - Parts Lookup

01 - TOP AND CABINET PARTS - IMAGE

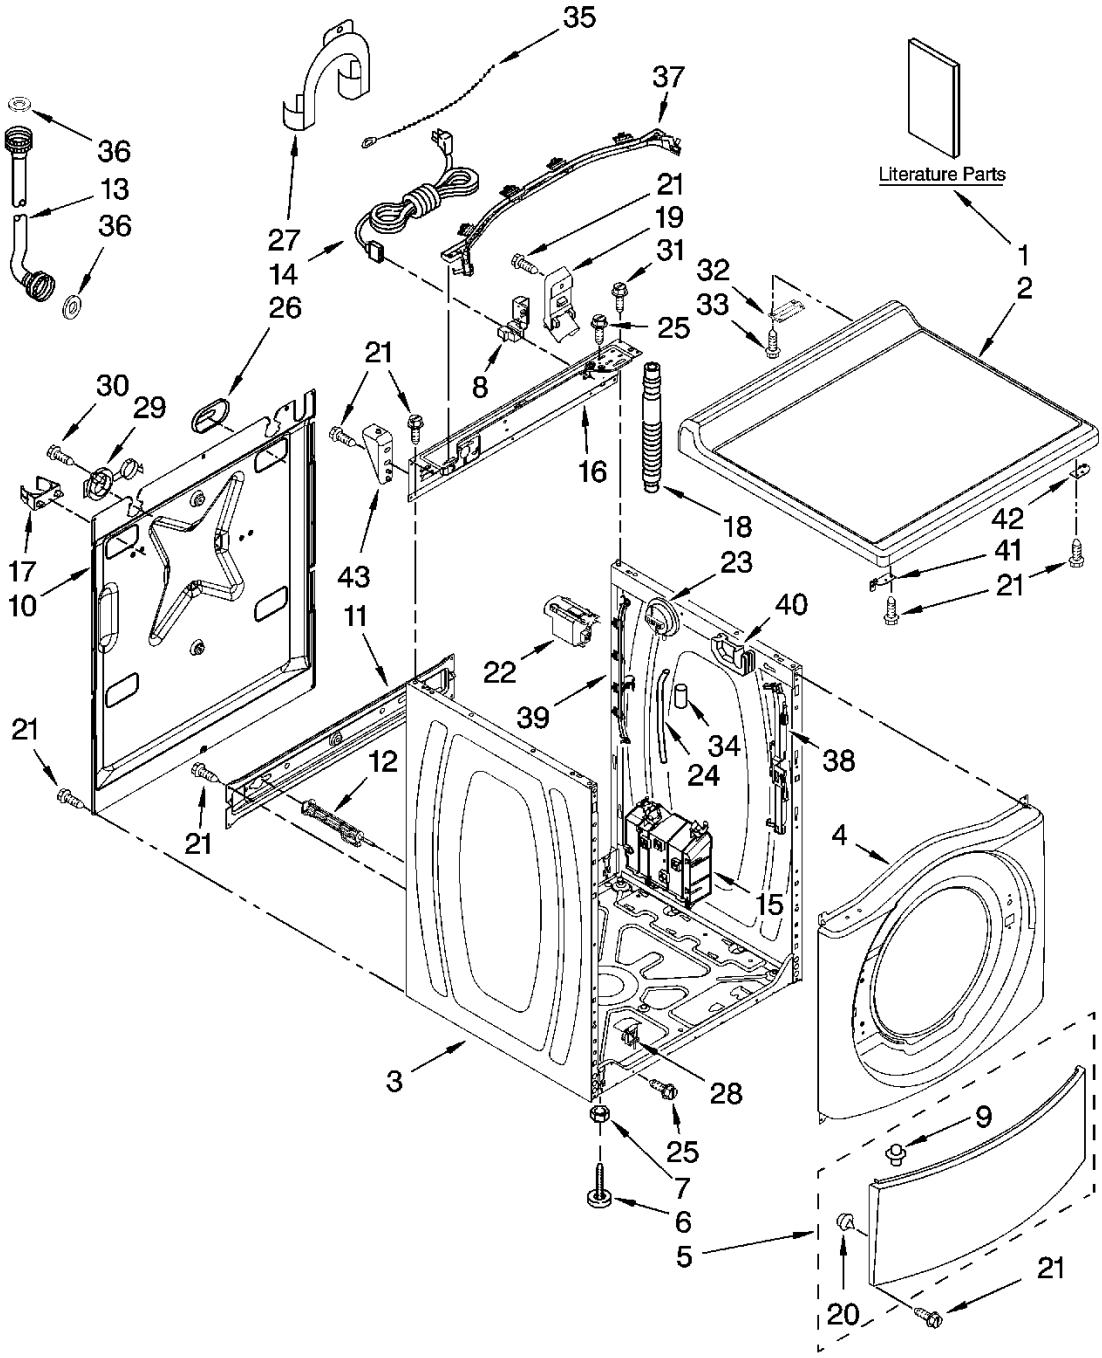

01 - TOP AND CABINET PARTS

Illus. Item	Description	MFG #	ALT MFG#
1	Installation Instructions	W10165327	
	Tech Sheet (English)	W10165326	
	Tech Sheet (French)	W10194214	
	Installation Instructions, Card Reader	W10165325	
	Repair Parts List	W10189988	

MAH22PRAWW - Parts Lookup

Illus. Item	Description	MFG #	ALT MFG#
2	Top	W10137410	
3	Cabinet	W10184997	
4	Panel, Front	W10112948	
5	Toe Panel	8540813	
6	Foot, Leveling	W10121677	
7	Nut, Lock	3359452	
8	Strain Relief, Power Cord	W10110676	8182635
9	RIVET	8518891	
10	Panel, Rear	8540582	
11	Brace, Transport	W10189659	
12	Bolt, Shipping	8540199	279993
13	Hose, Water Inlet (Blue Coupler)	8571377	89503
	Hose, Water Inlet (Red Coupler)	8571378	89503
14	Cord, Power	W10029820	
15	Motor Control Unit	W10163005	
16	Brace, Rear	W10161694	
17	Clamp, Tube Transportation	8540093	
18	Hose, Drain	W10114608	
19	Retainer, Hose Outlet	8540607	
20	Bumper	238614	8540977
21	Screw, 8-18 x 5/8	W10015090	489442
22	Filter, Interference	8540230	
23	Switch, Pressure	W10163980	
24	Hose, Pressure Switch	8540294	
25	Screw, Grounding	8540479	
26	Cover, Transport	8540268	
27	U-Bend, Drain Hose	8540021	
28	Microswitch	W10085220	
29	Sleeve, Cord Support	8540728	
30	Screw, 3 x 8 mm	8540727	
31	SCREW	8540329	
32	Hinge & Pin Assembly	8565018	
33	Screw, 8-18 x 1/2	342055	488627
34	Sleeve, Pressure Switch Hose	2161302	2162499
35	Cable Tie	3347868	
36	Washer, Water Inlet Hose 1-1/16 x 5/8	16123	
37	Harness Channel, Top Rear	W10168548	
38	Harness Channel, Side Front	W10168546	
39	Harness Channel, Side Rear	W10168547	
40	Bracket, Spring	8540644	
41	Bracket - Top Panel, Left	W10137445	
42	Bracket - Top Panel, Right	W10137444	
43	Stop - Top Panel	W10137398	

MAH22PRAWW - Parts Lookup

02 - DOOR AND LATCH PARTS - IMAGE

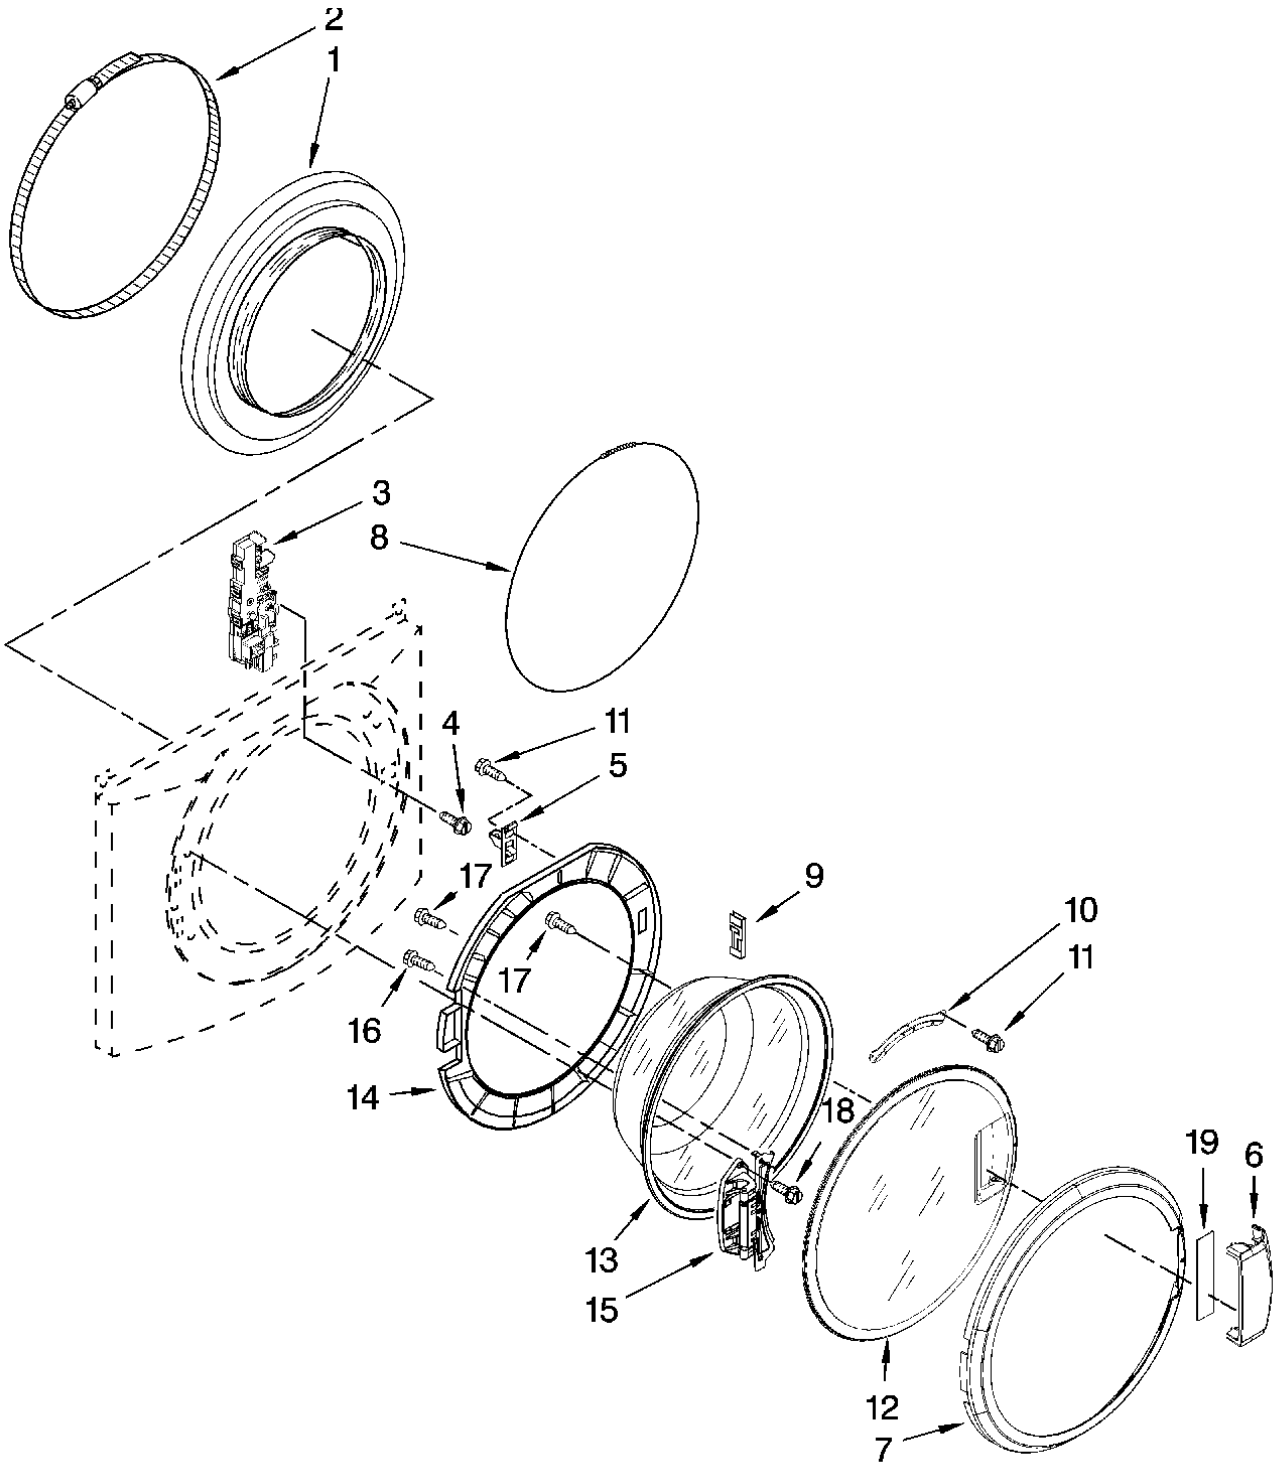

MAH22PRAWW - Parts Lookup

02 - DOOR AND LATCH PARTS

Illus. Item	Description	MFG #	ALT MFG#
1	Bellow	W10130455	
2	Clamp, Bellow	8540108	
3	Lock, Door	W10153867	
4	SCREW	8540725	
5	Hook, Door	8540221	
6	Handle, Door (Includes Item 19)	W10117474	
7	Trim Ring, Outer Door	W10112914	
8	Clamp, Bellow (Front)	8540107	
9	Clamp, Support	8540115	
10	Clamp, Glass	8540114	
11	SCREW	8540513	8182214
12	Frame, Door Front Assembly	W10137404	
13	Glass, Door	W10112078	8540428
14	Frame, Door Back Support	W10138523	
15	Hinge, Door	W10118967	
16	SCREW	8540284	8181660
17	SCREW	8540282	
18	Screw	W10015090	489442
19	Pad, Door Handle	W10112927	

MAH22PRAWW - Parts Lookup

03 - CONTROL PANEL PARTS - IMAGE

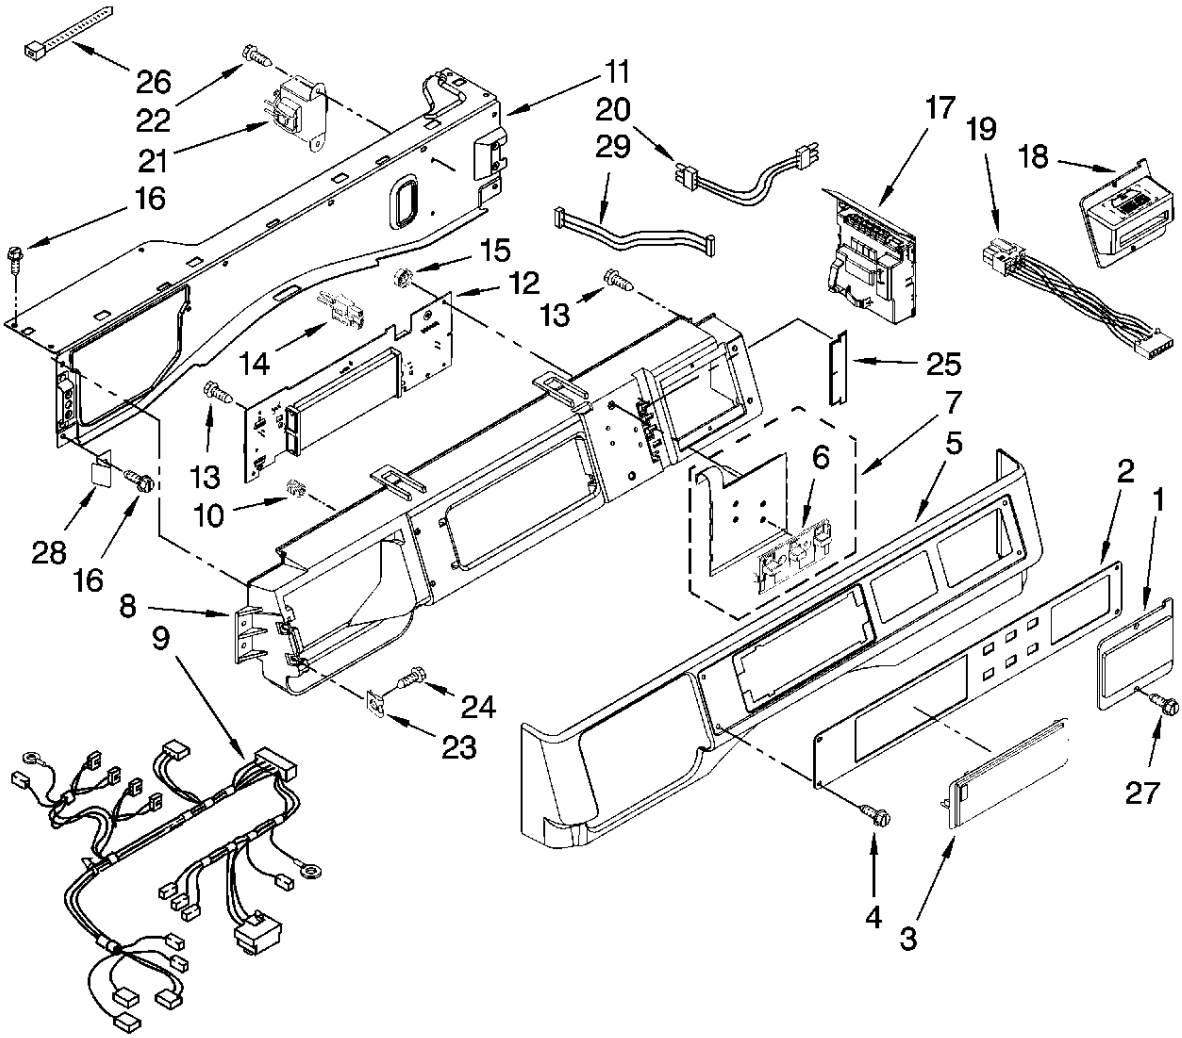

MAH22PRAWW - Parts Lookup

03 - CONTROL PANEL PARTS

Illus. Item	Description	MFG #	ALT MFG#
1	Cover, Card Reader	W10137477	
2	Facia / Overlay	W10137437	
3	Cover, Display	W10131114	
4	Screw, 8-32 X 1/2	W10137457	
5	Console, Outer	W10137458	
6	Push Button	W10131113	
7	Push Button & Switch Assembly	W10135389	
8	Console, Inner	W10137426	
9	Harness, Wiring (Main)	W10166474	
10	Insert	W10189313	
11	Bracket, Console	W10137396	
12	User Interface	W10137418	
13	Screw, 3-24 X 3/8	489136	
14	Jumper, Service Vault Switch	W10133282	
15	Nut 6-32	W10139046	
16	Screw, 8-18 x 5/8	W10015090	489442
17	Microcomputer, Machine Control	W10141556	
18	Bezel, Card Reader	W10137454	
19	Harness, Wiring (Card Reader)	W10133304	
20	Harness, Wiring (Console UIC)	W10155149	
21	Transformer 120 To 22.5 VAC	W10131839	
22	Screw, 8-18 X 7/16	8540329	
23	Nut, U-Type	9781235	
24	Screw, 8-18 X 1/2	W10131119	
25	Seal, Console	W10187276	
26	Cable Tie	3429563	2205813
27	Screw, 3-24 x 3/8	W10001220	
28	Clip, Console	W10137488	
29	Harness, Test	W10155150	

MAH22PRAWW - Parts Lookup

04 - DISPENSER PARTS - IMAGE

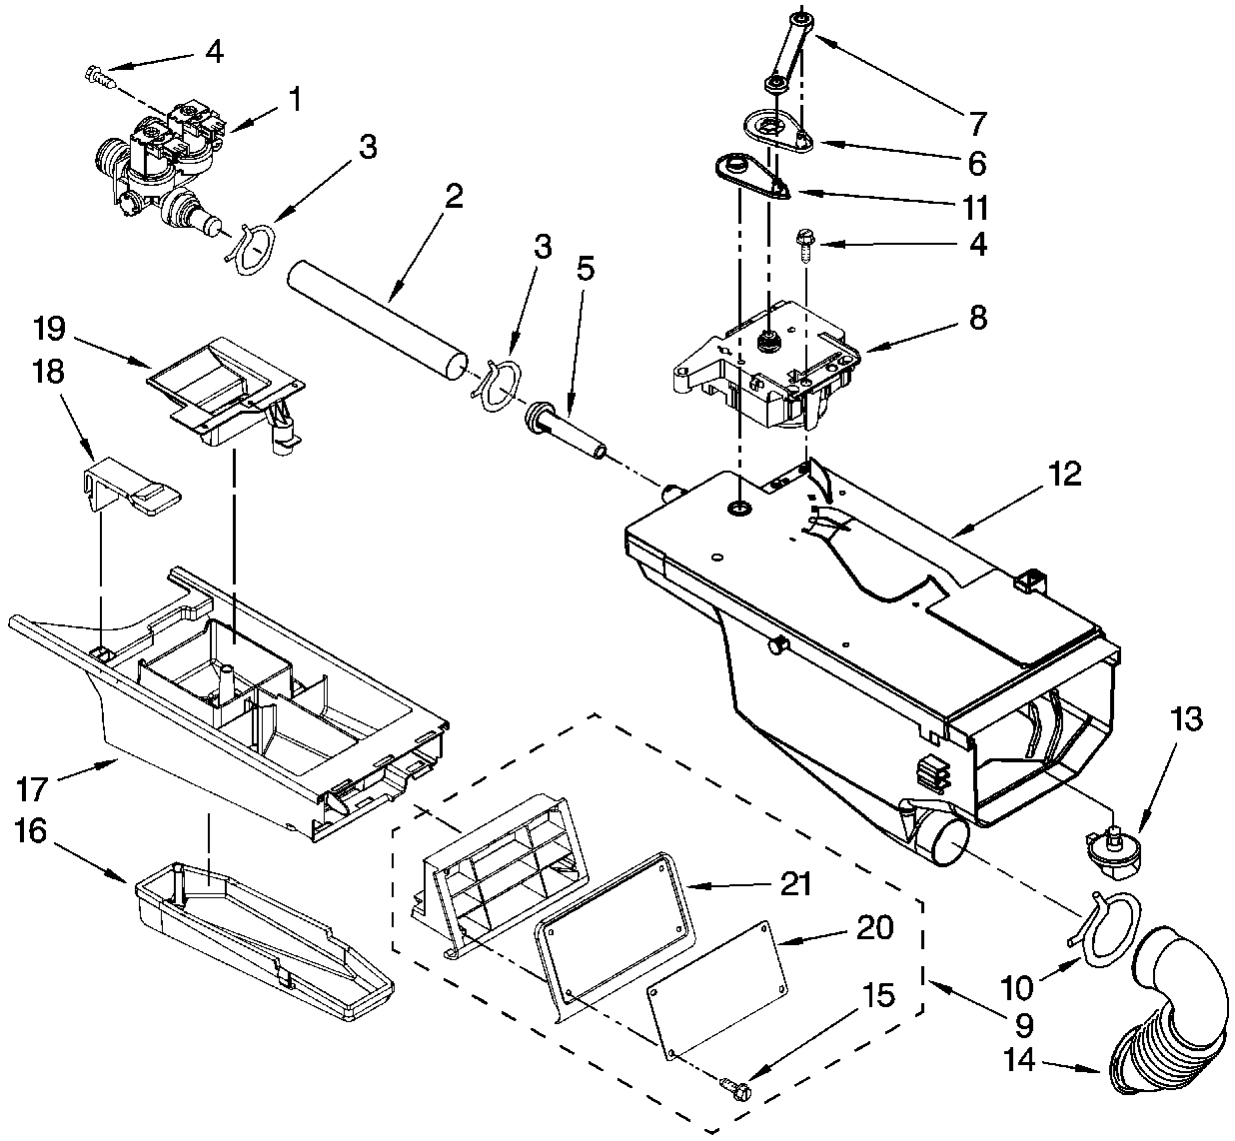

MAH22PRAWW - Parts Lookup

04 - DISPENSER PARTS

Illus. Item	Description	MFG #	ALT MFG#
1	Valve, Inlet	8540751	
2	Hose, Valve To Dispenser	8540065	
3	Clamp, Hose	370450	596669
4	SCREW	8540282	
5	Nozzle, Inlet	8540042	8183181
6	Cam, Actuator	8540393	
7	Lever, Water Distribution	8540394	
8	Actuator	W10143587	W10143586
9	Handle Assembly, Drawer	W10137428	
10	Clamp, Hose	8281276	
11	Connection, Lever	8540395	
12	DISPENSER	8540058	
13	Nozzle, Distribution	8540053	
14	Hose, Dispenser To Tub	8540063	
15	Screw, 8-18 X 1/2	W10137456	
16	Cover, Detergent Drawer	8540399	
17	Drawer, Detergent	8540402	
18	Hook, Drawer	W10137402	
19	Siphon, Bleach/Softener	8540429	
20	Facia / Overlay, Drawer	W10137430	
21	Cover, Handle	W10137460	

MAH22PRAWW - Parts Lookup

05 - PUMP AND MOTOR PARTS - IMAGE

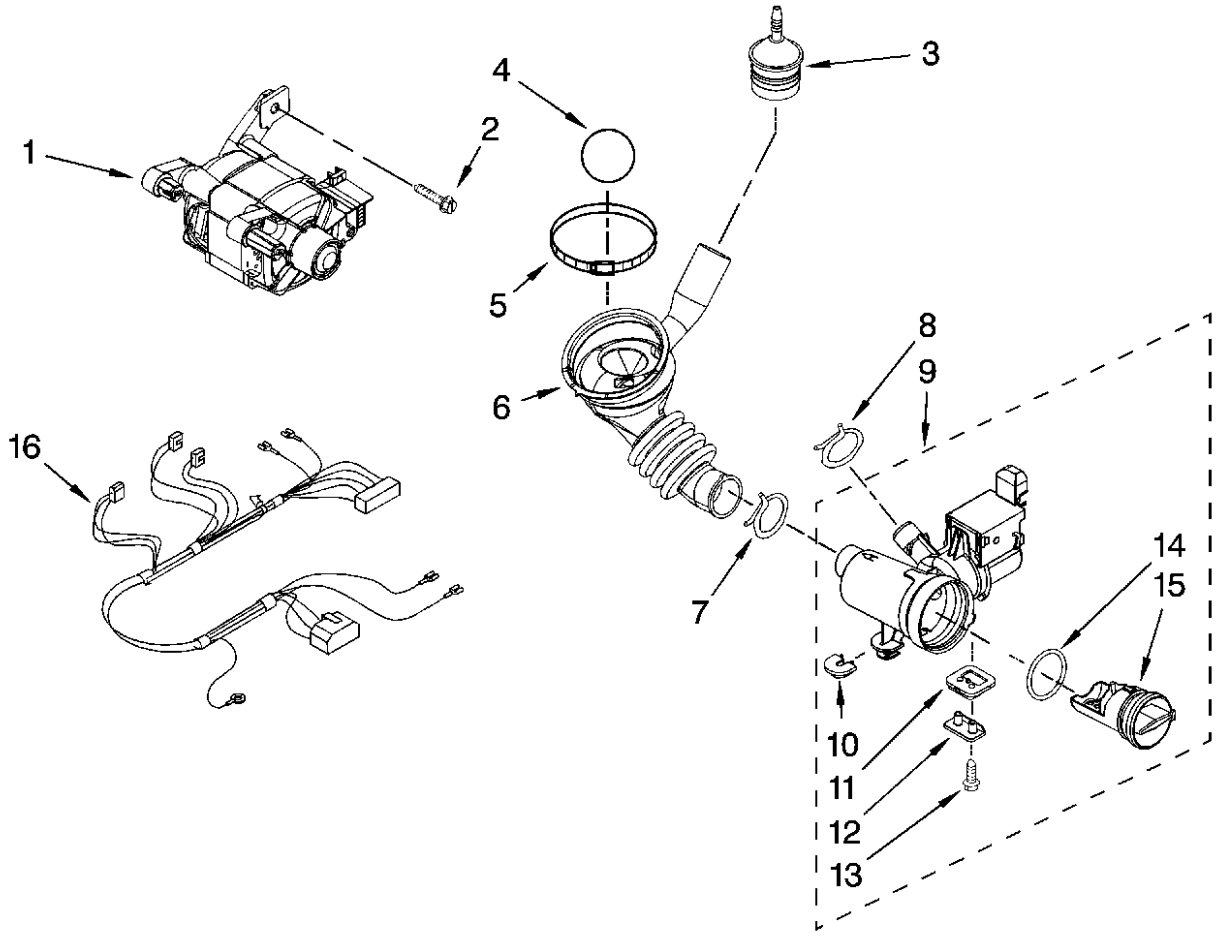

MAH22PRAWW - Parts Lookup

05 - PUMP AND MOTOR PARTS

Illus. Item	Description	MFG #	ALT MFG#
1	Motor, Drive	W10140579	
2	Bolt, Motor	8540134	
3	Air Trap	8540180	
4	BALL	8540013	
5	CLAMP	8540008	
6	Hose, Tub to Pump	8540012	
7	Clamp, Hose	370448	616099
8	Clamp, Drain Hose	356138	
9	Pump (Complete)	W10130913	
10	Foot, Rubber (Slider)	W10034820	
11	Foot, Rubber (Lock)	W10034830	
12	Cap, Lock Foot	8540033	
13	Screw, 10-16 x 1.25	8533964	
14	Seal, Filter Cap	8540025	
15	Filter Assembly (Includes Item 14)	8540996	
16	Harness, Motor	W10166995	

MAH22PRAWW - Parts Lookup

06 - TUB AND BASKET PARTS, OPTIONAL PARTS (NOT INCLUDED) - IMAGE

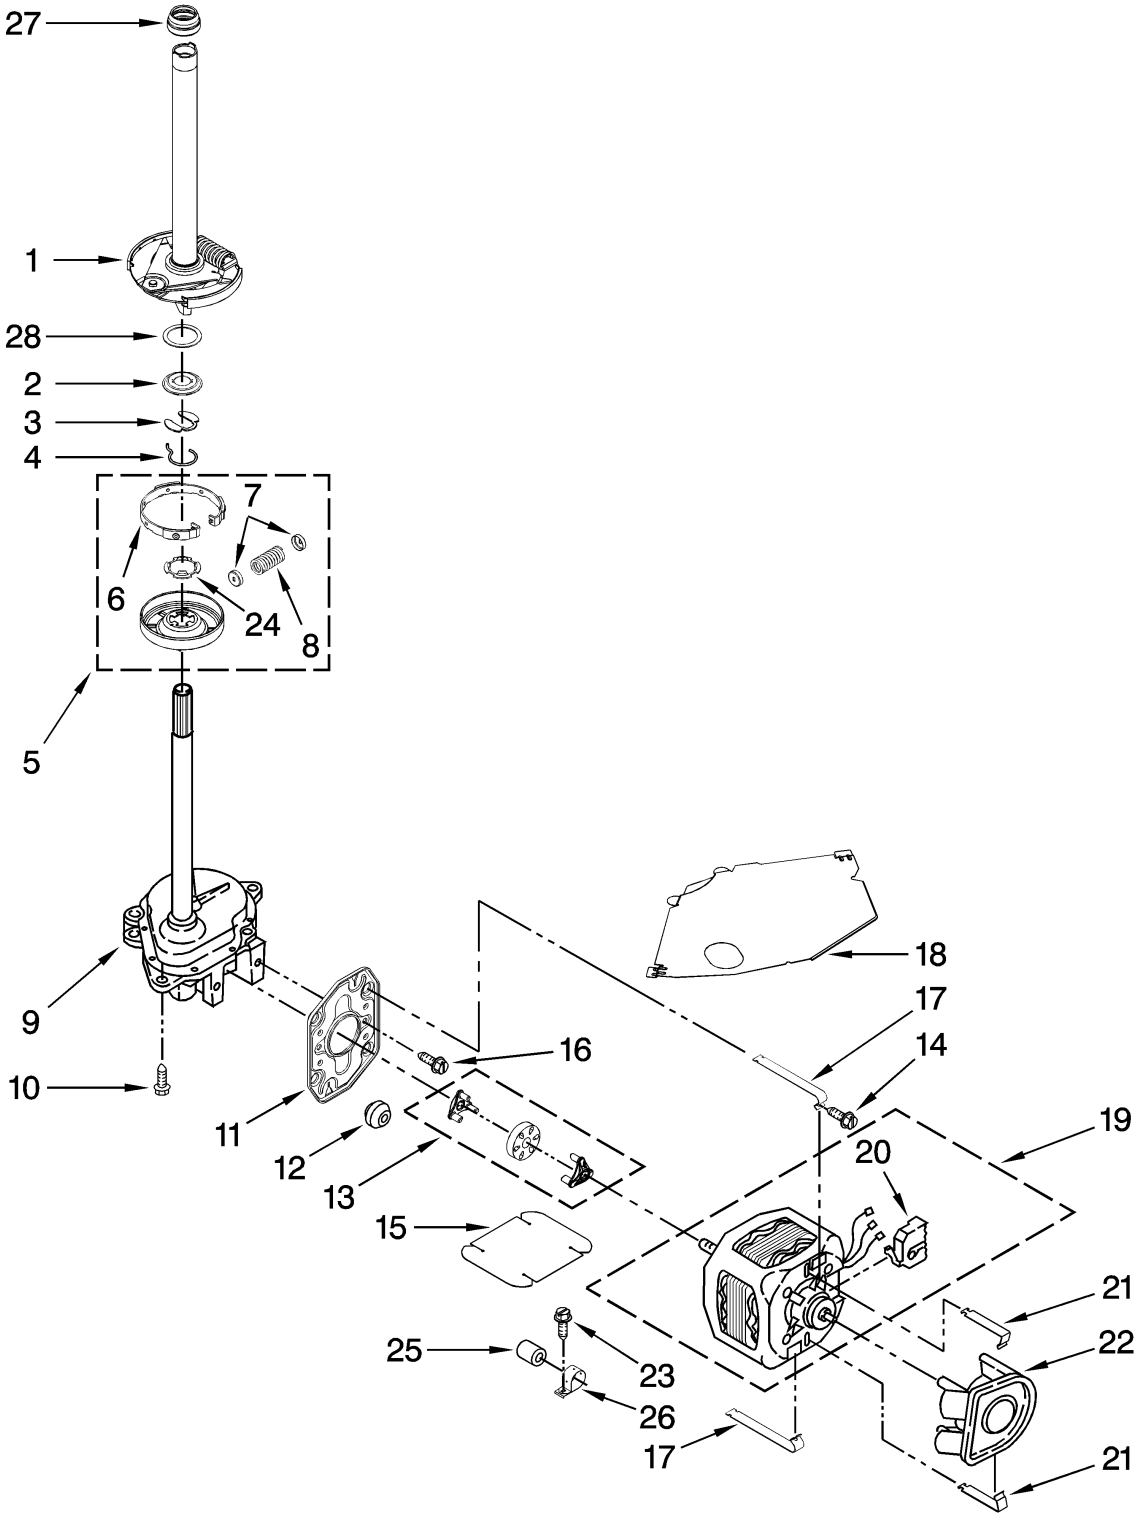

MAH22PRAWW - Parts Lookup

06 - TUB AND BASKET PARTS, OPTIONAL PARTS (NOT INCLUDED)

Illus. Item	Description	MFG #	ALT MFG#
1	Nut, Pulley	8533999	
2	PULLEY	8540088C	
3	Belt, Drive	W10116215	
4	Counterweight, Front Lower	W10151304	W10200297
5	Pipe, Ventilation	W10142720	
6	Clamp, Vent Hose	8540010	
7	Hose, Exhaust	8540019	
8	Tub, Rear (Includes Items 10, 21 & 22)	W10112658	280251
9	Counterweight, Rear	8540602	
10	Gasket, Tub	8540090	
11	Basket, Complete	W10165321	
12	Baffle, Tub	W10118982	
13	Connector - Ventilation	W10142721	
14	Flap - Ventilation	W10142722	
15	Counterweight, Front Upper	W10151303	W10200296
16	Spring, Suspension	W10010360	280159
17	Bolt, Counterweight Mtg.	W10094780	W10182109
18	Clamp, Hose	3363365	
19	Hose, Exhaust	8540015	
20	Clamp, Tub	8540092	
21	Tub, Front (Includes Items 8, 10 & 22)	W10112659	280251
22	Nut, Push-In	8540072	8182512
23	Shock Absorber	W10163171	
24	Negative Thermistor Control	8540226	8181705
25	Seal, Rubber	8540766	
26	SCREW	8540382	
27	Crosspiece Assembly	8540457	
28	Bolt Assembly Counterweight Center Hole	W10174473	W10182109
	PAINT, TOUCH-UP (1/2oz.) (White)	72017	
	PAINT, PRESSURIZED SPRAY (12 oz.) (Primer, Gra	350938	
	PAINT, PRESSURIZED SPRAY (12 oz.) (White)	350930	
	PAINT, BULK (1 qt.) (White (Uncut))	799344	
	Drain Extension	285863	
	Affresh Odor Remover	W10135699	

Ten Steps to Quality Customer Service

Step 1: See the person that called for service as well as the Manager/office.

Step 2: Survey the laundry room-outside and inside.

Before you reach the first machine you should know:

A. Condition of vent hoods.
B. Are instruction signs properly installed.
C. If there is water, oil or trash on the floor.
D. Brand of machines in the room plus vend price.
E. If machines are level and aligned

Step 3: Systematically check-out machines, checking for:

All Machines:

A. Condition of line cords-proper grounds and electrical polarity.
B. Coin-chute operation-sticky, free, decals.
C. Behind the machines-water, trash, lint, etc.
D. Secured meters, locks, covers, tops, front panels, consoles and backs.
E. Safety features-missing or loose back panels, end caps, outlet and wall switch covers and floor drain covers.
F. Chipped tops/graffiti/rust.
G. Noise level of machines in operation.

Washers:

A. Condition of fill hoses/faucets-leaks, bubbles, cracks, rust.
B. Lid switch operation/adjustment.
C. Tub and wash basket components-agitators, guards, rust, hoses.
D. Water temperature-when possible.
E. Console switches/lights.

Dryers:

A. Free timers.
B. Door operation-properly closing, hinges, catches, latches, handle, seals.
C. Inside dryer-drums, seals, rust, exhaust.
D. Lint screens-exhaust chambers, sharp edges.
E. Rotate drums-noisy rollers, broken belts, scraping.
F. Console switches
G. Safety features-door switch, etc.
H. Gas lines, shut-off valves, gas odors.
I. Vent system.

Step 4: Diagnose machines marked out-of-order or reported not operating properly.

Step 5: Go to your vehicle for all parts/materials needed.

Step 6 Repair the machines.

Step 7: Clean everything up: machines, room and yourself.

Step 8: Complete all paperwork/order parts.

Step 9: Survey the room/machine-leave an "OK to Use" sign.

Step 10: See the manager/office before leaving the location.

WEB's "Service" keeps our customers happy!